


TANE ALARM PRODUCTS



Installation instructions for MINI DISC .59" Dia. Recessed Door and Window Contacts

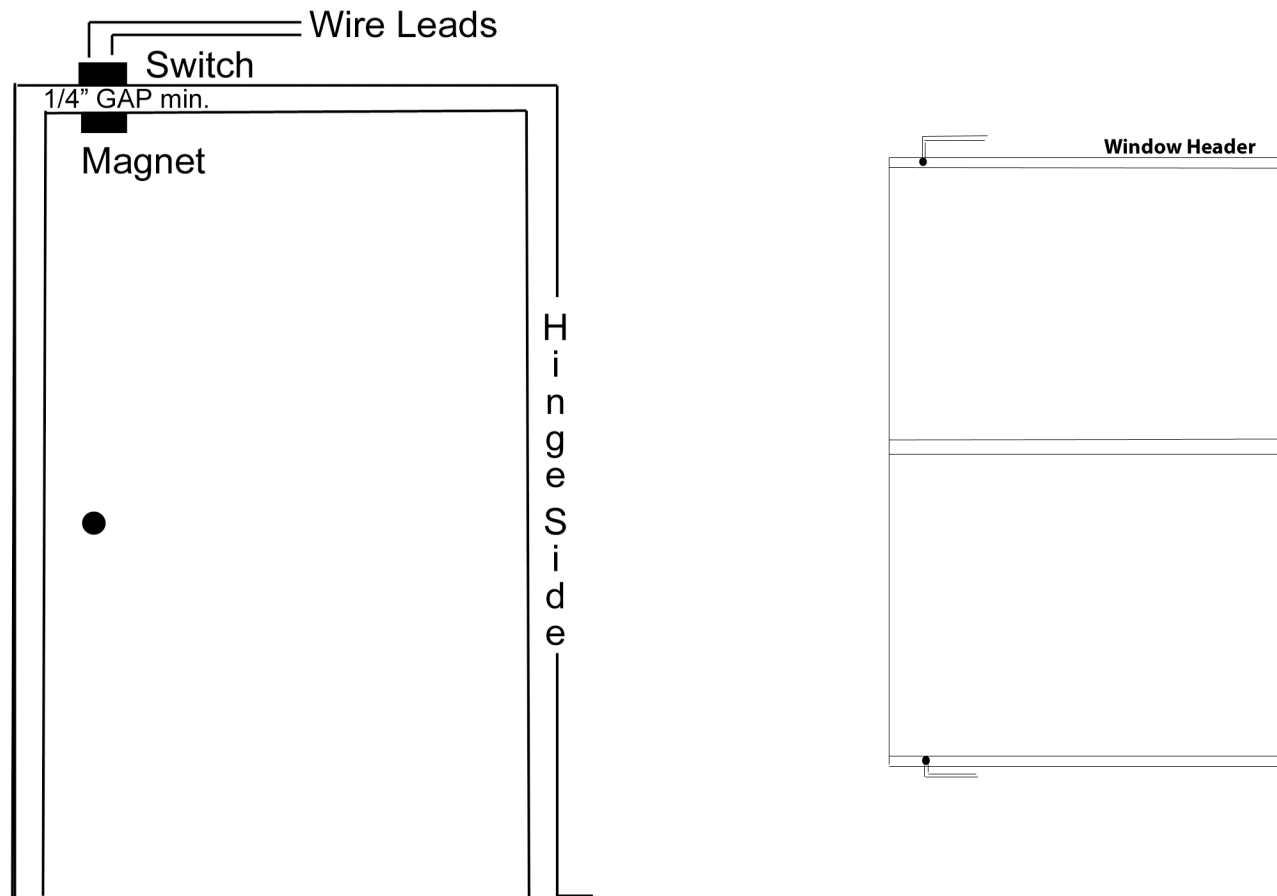

Drill .59" (15mm) hole (NOT on hinge side) of door frame or hinged window to mount the switch

For double hung windows drill .59" (15mm) hole in top or bottom of window channel to mount switch

Drill .59" (15mm) hole in window or door to mount the magnet

Make sure Gap is not less than 1/4" between switch and magnet

Splice leads from switch into alarm circuit

NOT for use with Steel doors and windows

WWW.TANEALARM.COM

906 Jericho Turnpike
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050
Fax: 516-326-9125 Email: info@tanealarm.com