


TANE ALARM PRODUCTS



Installation instructions for PB-52 & PB52TC 3/4" Dia. Reed Push-Button Jamb-Switches

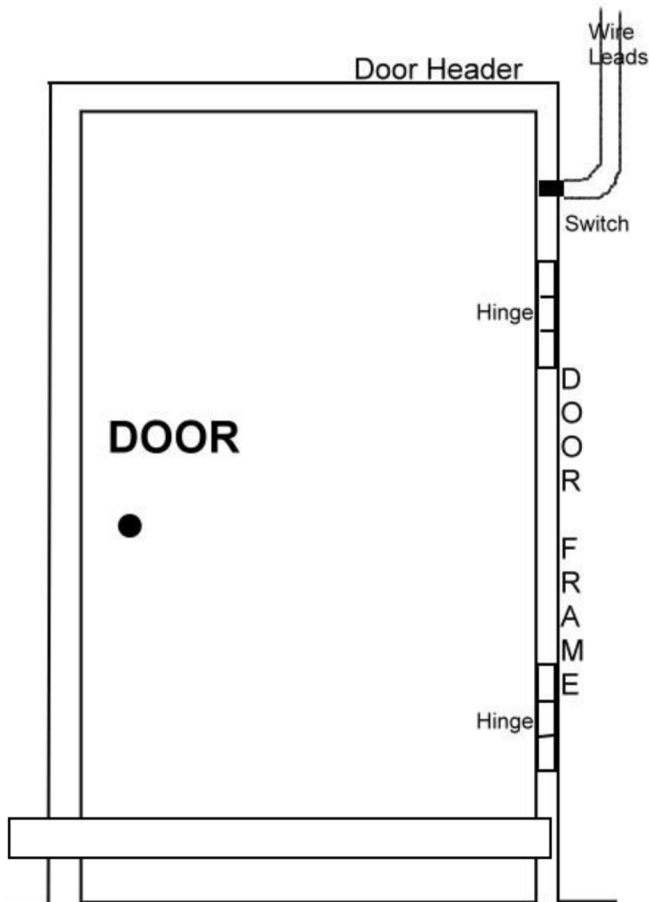

Drill 3/4" hole ON HINGE SIDE of window or door frame to mount switch*

For PB-52 splice wire leads from switch into alarm circuit

For PB-52TC insert wire leads from alarm circuit under switch terminals

*Closing door or window compresses Push-Button into contact shell - closing loop and deactivating alarm - When door or window is opened the Push-Button extends from shell - opening loop and activating alarm

WWW.TANEALARM.COM

906 Jericho Turnpike
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050
Fax: 516-326-9125 Email: info@tanealarm.com