


# TANE ALARM PRODUCTS



## Installation instructions for TANE MICRO Surface Mount Contacts GAP .32"

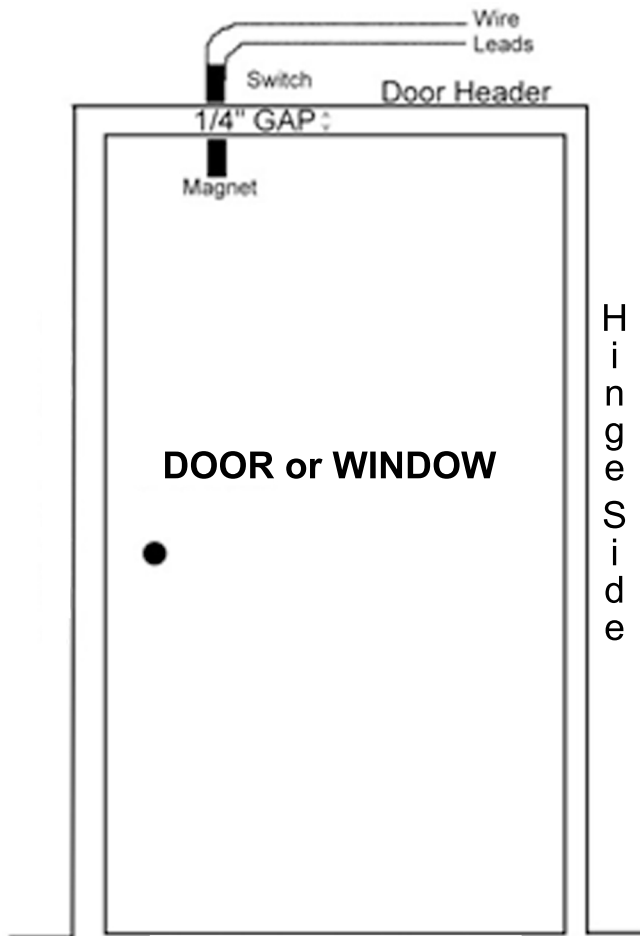

- Attach switch to header or side of door or window frame (NOT on hinge side)
- Attach magnet to door or window adjacent to the switch
- Make sure Gap is not less than 1/4" between switch and magnet
- Splice wire leads to alarm circuit
- NOT for use on Steel, surfaces

**WWW.TANEALARM.COM**

906 Jericho Turnpike  
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050  
Fax: 516-326-9125 Email: [info@tanealarm.com](mailto:info@tanealarm.com)