



# TANE ALARM PRODUCTS

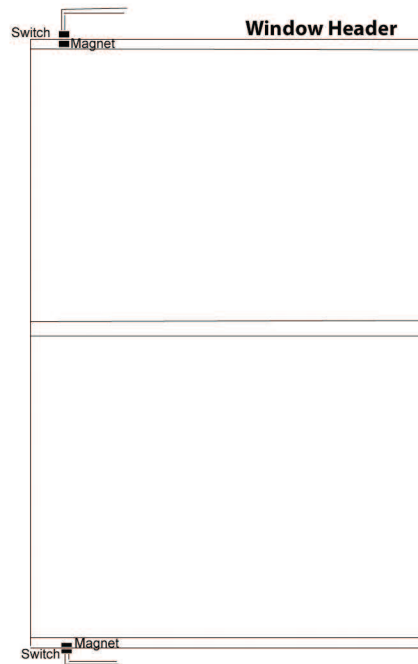

## Installation instructions for RFM-25 Family of 1/4" Dia. Recessed Door and Window Contacts Gap .71"

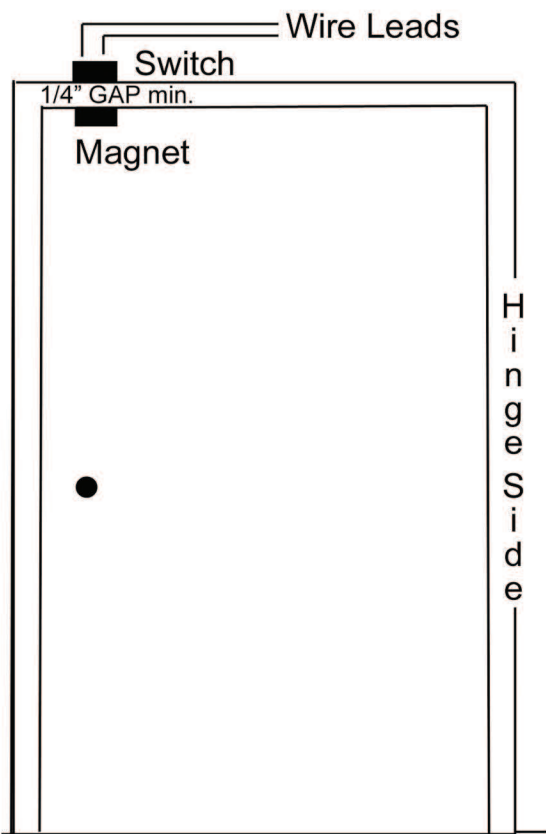

Drill 1/4" hole in window or door frame (NOT on hinge side) to mount the switch

Drill 1/4" hole in window or door to mount the magnet

Make sure Gap is not less than 1/4" between switch and magnet

Insert leads from alarm circuit under terminals

NOT for use with Steel doors and windows

A compatible power source with power-limited output, and that is UL® Listed for Residential or Commercial Burglary Alarm applications shall be used with the magnetically-actuated switch.

**WWW.TANEALARM.COM**

906 Jericho Turnpike  
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050  
Fax: 516-326-9125 Email: [info@tanealarm.com](mailto:info@tanealarm.com)