


# TANE ALARM PRODUCTS



*"We Contact The World"®*

## Installation Instructions for MET-200 family of Armored Commercial - Overhead Door Switches

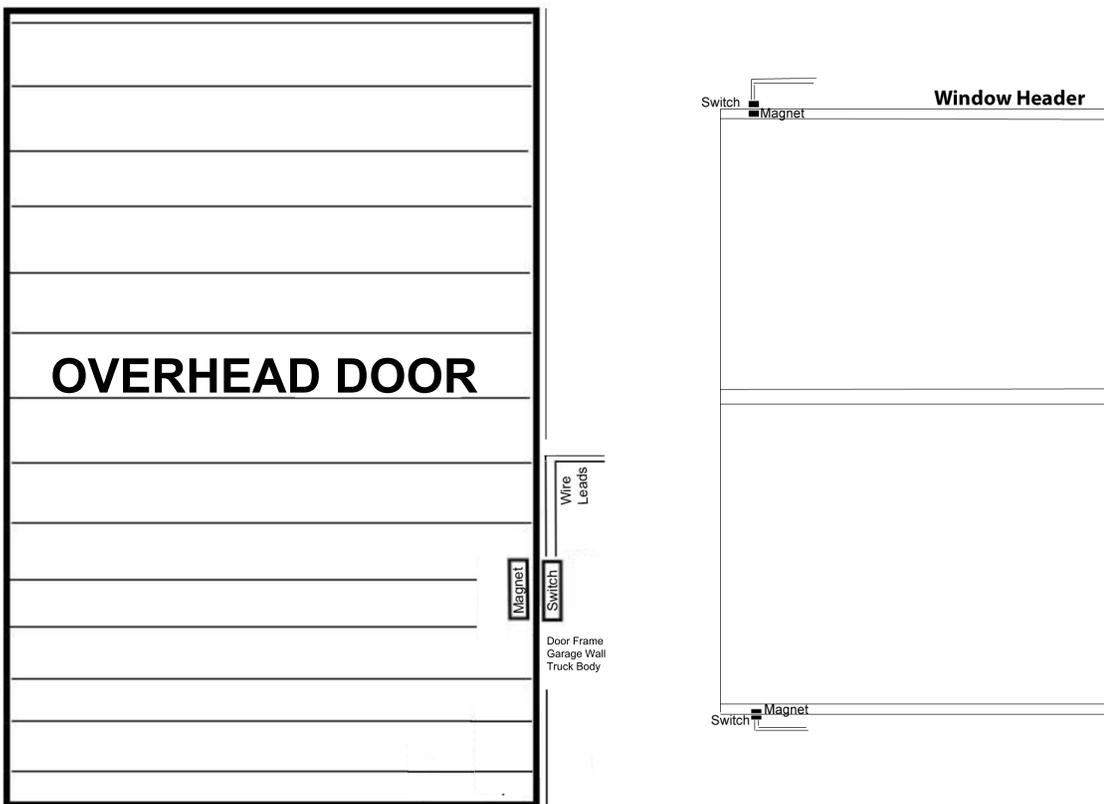

Surface mount switch on top or side of door or window frame, on garage wall or truck body  
Surface mount magnet parallel to the switch  
Make sure the gap between contact and magnet is NOT less than 1/2" apart  
For MET-200AR splice armored cable into alarm circuit  
For MET-200 splice wire leads into alarm circuit  
Designed for use with Steel (use spacers), Wood and other door and window materials

**WWW.TANEALARM.COM**

906 Jericho Turnpike  
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050  
Fax: 516-326-9125 Email: info@tanealarm.com