


# TANE ALARM PRODUCTS



## Installation instructions for TANE-50 (Covered) Surface Mount - Door and Window Contacts with Quick Connect Terminals

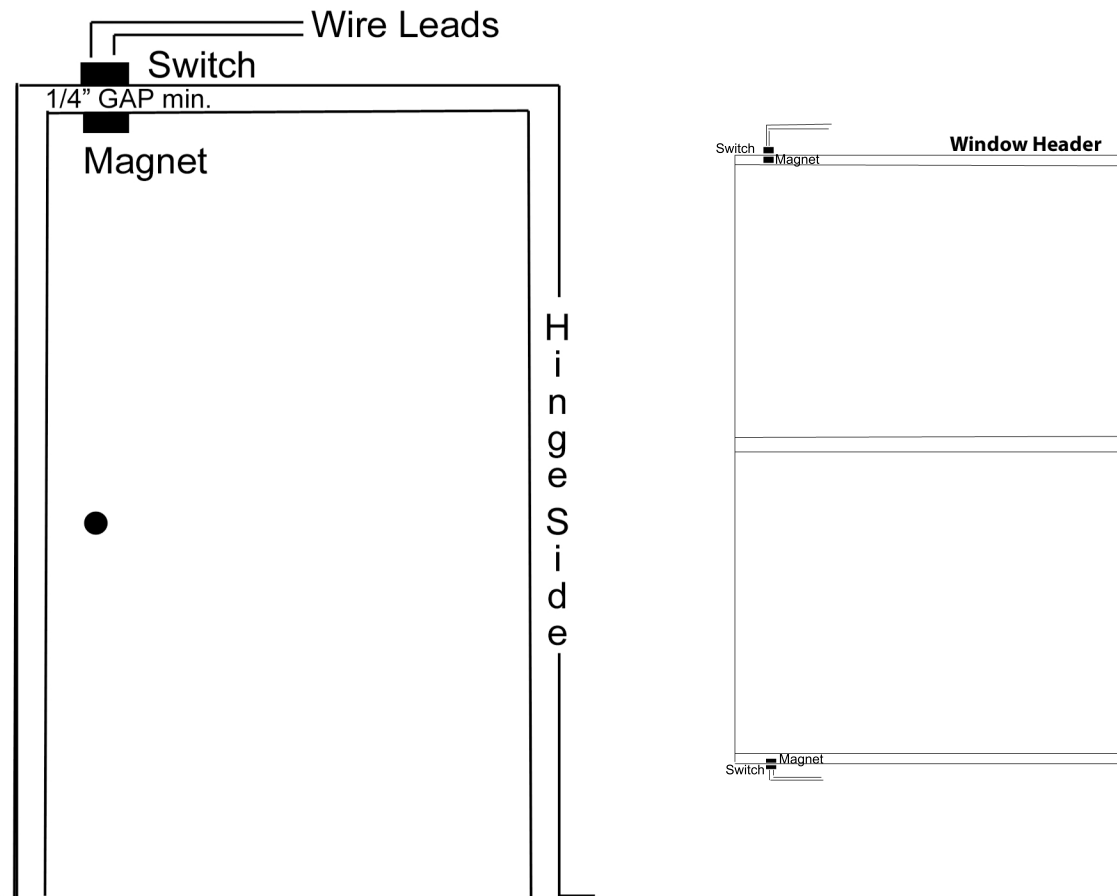

Surface mount switch at top or side (NOT on hinge side) of door or hinged window frame  
On double hung window, surface mount the switch at top, side or bottom of window frame  
Surface mount the magnet parallel to the switch  
Make sure Gap is not less than 1/4" between switch and magnet  
Insert leads from alarm circuit under terminals  
NOT for use with Steel, doors and windows

**WWW.TANEALARM.COM**

906 Jericho Turnpike  
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050  
Fax: 516-326-9125 Email: [info@tanealarm.com](mailto:info@tanealarm.com)